
Robert Abbey, Inc.

ASSEMBLY INSTRUCTIONS FOR YOUR

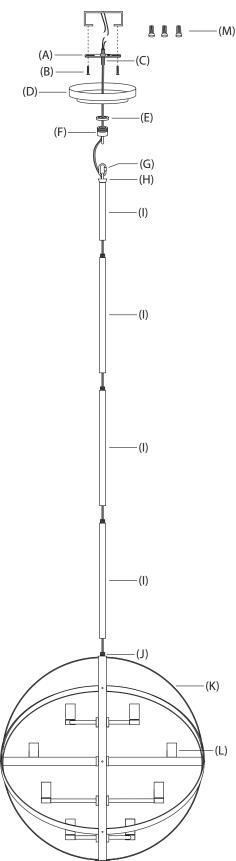

IMPORTANT SAFETY INSTRUCTIONS:

*These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.

*WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.

- *Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- *DO NOT subject the fixture to any shock while lit as shattering of bulbs may result.

ASSEMBLY INSTRUCTIONS:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT FUSE BOX/ CIRCUIT BREAKER.
- 2. Remove all parts from carton. Do not throw away any parts.
- 3. Remove quick link (G) from hang straight (F). Keep quick link (G) attached to loop (H).
- 4. Remove cross bar (A) (with threaded nipple (C) and hang straight (F) attached) from canopy (D) by unscrewing collar (E). Affix cross bar (A) to ceiling outlet box using screws (B) provided.
- 5. Carefully slide threaded collar (E) and canopy (D) down extensions (I) until they rest on metal shade frame (K).
- 6. Measure desired drop for fixture to hang and add/remove extension tubes (I) to reach desired position. Guide wiring through extension tubes before threading tubes together.
- **TO ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension out of/ into the threaded opening of the next extension. Make sure wiring is pulled tight when threading extensions together to prevent damage to the wire.**
- 7. Thread bottom extension tube (I) onto threaded nipple (J).
- 8. Lift fixture to ceiling and secure quick link (G) to hang straight (F). Carefully guide wire through hang straight (F) and threaded nipple (C) into ceiling outlet box.
- 9. Make proper electrical connections noted in steps 10-12. A LICENSED ELECTRICIAN IS RECOMMENDED.
- 10. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (M). Tightly wrap connection with electrical tape.
- 11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape.
- 12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (M) and tightly wrap connection with electrical tape.
- 14. Gently push wires back into ceiling outlet box.
- 15. Slide canopy (D) up extensions (I) and hold flush against ceiling. To secure position of canopy (D), slide collar (E) up extensions (I) and thread onto hang straight (F). Turn until hand tight.
- 16. Install eight (8) 60W MAX. B-10, candelabra base bulbs into sockets (L).

To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.