CERTIFICATION: cUL DAMP

NO. 50548



INSTALLATION INSTRUCTIONS

IMPORTANT

Before assembling your access lighting fixture, please make sure that you carefully read through these instruction sheets. Consider having your fixture installed by a qualified licensed electrician.


NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture.



All electrical connections must be in accordance with all ordinances, Local and National Electrical Codes. These fixtures are intended for mounting to a standard 4" x 2 1/2"metal octagon outlet box. The box must be directly supported by the building structure and U.L. Recognized.

STEP BY STEP INSTRUCTIONS

Before starting your installation disconnect the Power by turning off the Circuit Breaker or by removing the fuse at the fuse box. Just turning the light off at the light switch is not sufficient to prevent electrical shock.

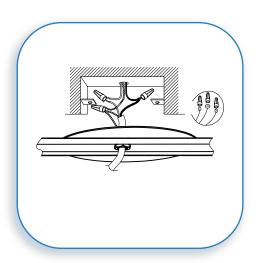



COLLECTION DEZI

APPLICATION

MODEL NO.

Pendant Fixture

50548

WHAT WE PROVIDE

- Crossbar
- Mounting Hardware

WHAT YOU NEED

- Screwdriver
- Wire Cutters
- Wiring Supplies as Specified
 by Electrical Code
- 3 x 18W GU24

PREPARE FIXTURE


If there is an existing fixture remove it.

Expose the supply wires from the J-box. Connect the black supply wire to the black fixture wire.

Secure with the supplied wire nuts. Connect the white supply wires to the white fixture wire. Secure with the supplied wire nuts. Either wrap the green wire around one of the protruding screws or connect it to the supply ground wire. Secure all wires with U.L. Certified electrical tape (not supplied). Tuck all wires carefully into the J-Box

CERTIFICATION: cUL DAMP


NO. 50548

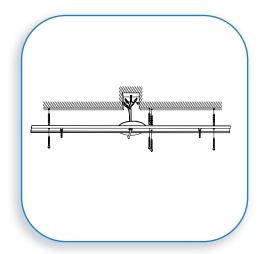

2

MOUNT CROSSBAR


Mount the supplied crossbar to the J-box with the supplied screws.

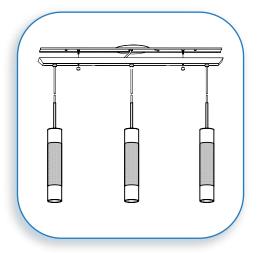

3

MOUNT THE CANOPY TO CROSSBAR

Mount the canopy to crossbar with the supplied screws.

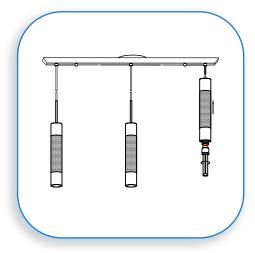

4

INSERT THE BULBS

Insert the bulbs .

MAXIMUM WATTAGE 18W.

DO NOT EXCEED THE RECOMMENDED WATTAGE AS

STATED ON THE WARNING LABEL AND

INSTRUCTION SHEETS.

CERTIFICATION: cUL DAMP NO. 50548

